 
 


USB-STECKERTYPEN

USB A




USB 3.0 A SuperSpeed



USB B




 USB 3.0 B SuperSpeed




USB Mini-A

 1 2 3 4 5



USB Mini-AB

 1 2 3 4 5



USB Mini-B

1 2 3 4 5



USB Micro-AB

1 2 3 4 5



USB Micro-B

1 2 3 4 5



USB 3.0 Micro-B SuperSpeed

1 2 3 4 5 6 7 8 9 10



USB C

